

# Procare Time Clock Touch

## Calibration Instructions



To begin, place the pen in the upper left corner of the LCD screen and hold prior to plugging the Procare Time Clock Touch into the computer.




While holding pen tip in the upper left corner of the screen, plug in tablet to the USB port on your computer.

A small line will appear in the upper left corner of the LCD screen. While holding the pen at a natural writing angle, lift pen tip from display, press pen tip back down on the upper left most part of the line and hold.



The line will disappear from the upper left corner, and reappear in the lower right corner. Press pen tip on lower right part of the line and hold.

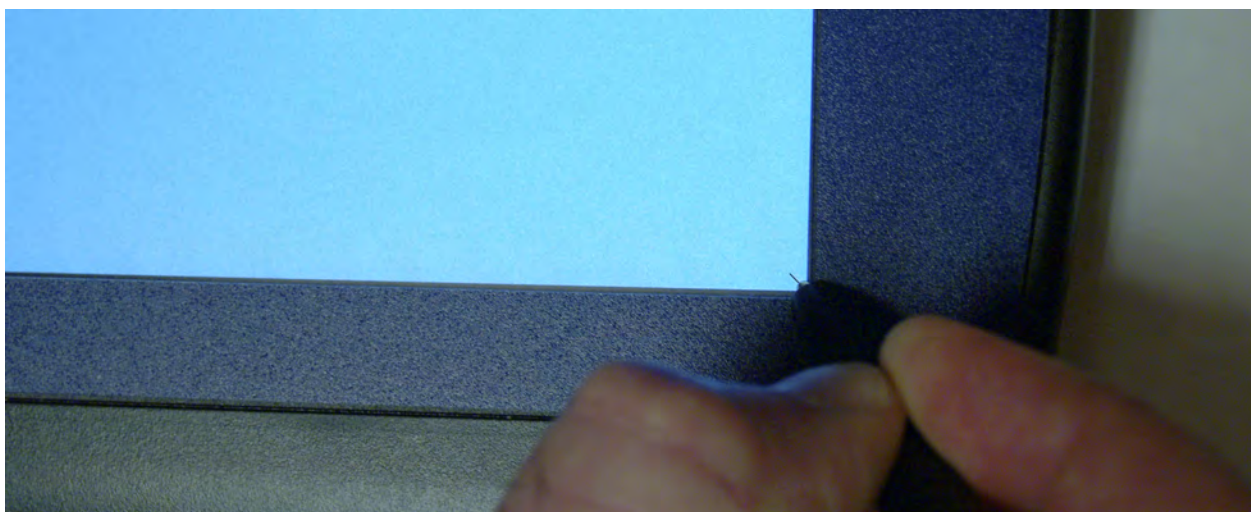

A wave will cross the screen from top to bottom. Your tablet is now calibrated and will show any markings made with the pen. If performance is not acceptable, follow the instructions carefully to re-calibrate.

